

***Polybatch* Electret Masterbatch for respiratory protective devices**

Masterbatch ADTS

February 2021

Joris Briers, Gianluca Musacchi



Respiratory Protective Devices

What is a FFP Mask?

- A Filtering Face Piece (FFP) mask is an individual respiratory protective mask designed to protect the wearer against the inhalation of both droplets and particles suspended in the air

Benefits:

- A FFP mask is more restrictive in terms of filtration requirements and comfort in use than a surgical mask (heat-related discomfort, breathing resistance), but it protects from inhaling infectious pathogens

Key requirements:

- FFP masks require filtration efficiency which is achieved via melt-blown and spun-bond layers
- The melt-blown fabric needs to be charged to have an efficient adsorption effect. For this static electricity to be stored, the material composition and structure needs to be conductive to charge retention



Face/Surgical mask



FFP1



FFP2



FFP3



LyondellBasell *Polybatch* Masterbatch for Melt Blown

LyondellBasell *Polybatch* Masterbatch for Melt Blown

- The LyondellBasell *Polybatch Electret Masterbatch* can increase the density and depth of the charge, trapping energy in the melt-blown non-woven fabric, store charge to improve the comprehensive filtration of the melt-blown non-woven fabric
- LyondellBasell *Polybatch Electret Masterbatch* addition in final non-woven formulation can:
 - Increase the charging retention of Melt Blown Non-Woven improving the filtering quality and reducing the absorption of liquids



LyondellBasell *Polybatch* Masterbatch for Melt Blown

	PP based	MFI > 600 g/10' (230°C/2,16kg)	Melt blown technology	Properties
<i>Polybatch</i> SNW 722 TK4	✓	✓	✓	Good Charging properties Good Barrier properties
<i>Polybatch</i> SNW 922 TK13	✓	✓	✓	Good Hydrophobic properties
50/50 <i>Polybatch</i> SNW 722 TK4 + <i>Polybatch</i> SNW 922 TK13 [Referred to as TK15 in the test results]	✓	✓	✓	High aerosol barrier properties Good balance charging Hydrophobic and Barrier properties

Respiratory Protective Devices: Main EU Normative for Masks

■ EN 14683 for surgical mask (Bacterial Filtration Efficiency and Differential Pressure)

- There are different types of surgical masks:
 - Type I: bacteria filtering effectiveness > 95%
 - Type IR: bacteria filtering effectiveness > 95% and splash-resistant
 - Type II: bacteria filtering effectiveness > 98%
 - Type IIR: bacteria filtering effectiveness > 98% and splash-resistant

■ EN 149:2001+A1:2009 (Respiratory Protective Devices)

- All maintenance-free dust respirators that are placed on the European market must be approved according to the requirements of the European Personal Protective Equipment Directive REG. EC / 425 / 2016
- Mask effectiveness:
 - FFP1 masks which filter at least 80% of aerosols (inward leakage < 22%)
 - FFP2 masks which filter at least 94% of aerosols (inward leakage < 8%)
 - FFP3 masks which filter at least 99% of aerosols (inward leakage < 2%)

The above norms have been used to characterize *Polybatch* Electret Masterbatches

Tests and Sample comparison

- We have prepared 22 gsm meltblown samples at different masterbatch concentrations mixed in HOMO-PP MFI 1200
- **Samples have been characterized at external qualified lab (Eurofins*):**
 - Bacterial Filtration Efficiency (BFE). Method: EN 14683:2019+AC:2019
 - Differential Pressure. Method: EN 14683 Annex C
 - Method: NF EN 149+E1 (respiratory protective devices)*
- **List of the samples:**
 - PP REF w/o MB
 - PP REF + 2% Polybatch SNW 722 TK4
 - PP REF + 5% Polybatch SNW 722 TK4
 - PP REF + 2% Polybatch SNW 922 TK13
 - PP REF + 5% Polybatch SNW 922 TK13
 - PP REF + 5% TK15




*Tests based on NF EN 149+E1 are still ongoing and are therefore not detailed on the next slides. Preliminary results showed that best performance are obtained by the combination of the TK4 and the TK13.

Bacterial Filtration Efficiency (BFE)

■ Normative EN 14683:2019+AC:2019 App B

- Type I and Type IR ≥ 95
- Type II and Type IIR ≥ 98

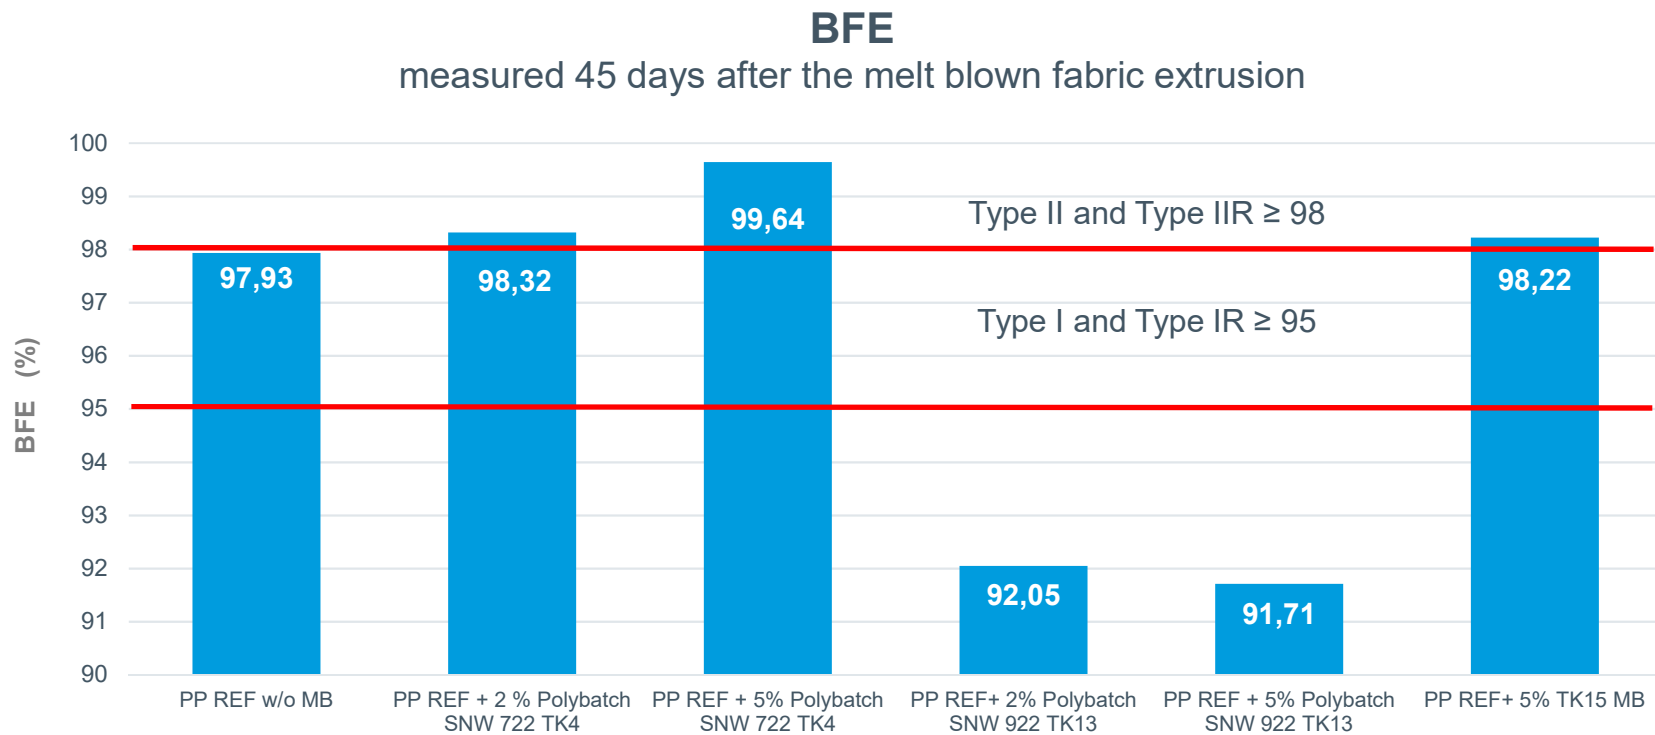


LyondellBasell Electret Masterbatches help to obtain higher and for longer time Bacterial Filtration Efficiency (BFE) protection

Breathability (Differential Pressure)

■ Normative EN 14683:2019+AC:2019 Annex C

- Type I and Type IR < 40 Pa/cm²
- Type II and Type IIR < 40 Pa/cm²

Differential pressure (Pa/cm²)
measured 45 days after the melt blown fabric extrusion

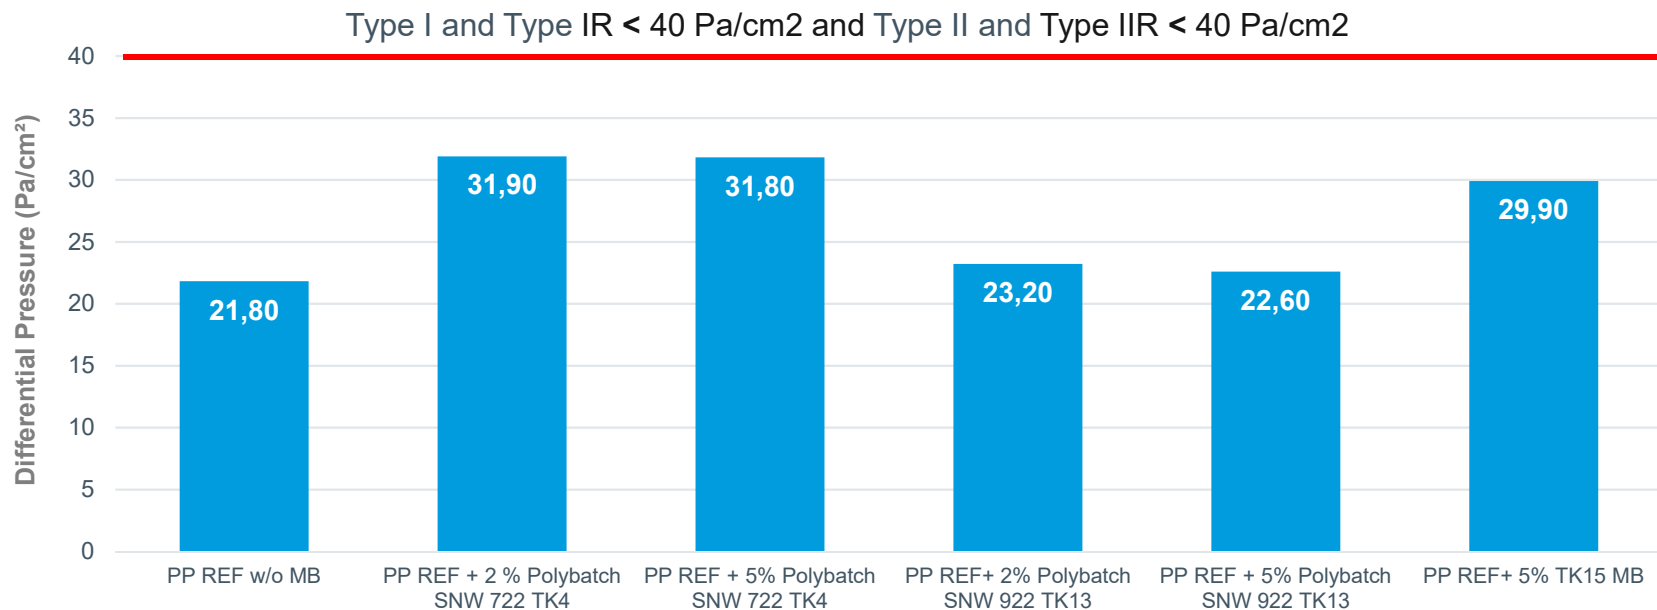

**Filtering effect of LyondellBasell Electret Masterbatches
is confirmed by differential pressure results**

Conclusion

- ***Polybatch SNW 722 TK4 NAT*** can be selected for the preparation of those melt blown NW fabric that needs to maintain the **elected charging**
- ***Polybatch SNW 922 TK13 NAT*** can be selected for the preparation of those melt blown NW fabric that needs **hydrophobic properties**
- **50/50 mix of the *Polybatch SNW 722 TK4 NAT* + *Polybatch SNW 922 TK13 NAT*** (TK15 in the graphs/results) can be selected for the preparation of those melt blown NW fabric that needs to **combine good BFE, good differential pressure and good penetration of filter material**
- The Masterbatch can be easily mixed in PP-HOMO from MFI* 800g/10' up 1500g/10' (and more)
- Masterbatch concentration proposed to use is from 5% up to 10%

*MFI measured @ 230°C/2,16kg

LyondellBasell product offering

LyondellBasell is offering a large product range that is being used in a wide range of non-woven applications:

- PP & PB-1 grades for non-woven
- White & Black masterbatches specially designed for non-woven
- Functional additive masterbatches:
Anti-static, Anti-UV, Flame retardant,
Processing aids, Slip, Softness, ...
- Color masterbatches for nonwoven



Contact

Gianluca Musacchi

Technical Service Engineer

Consumer & Industrial, APS Europe

Basell Poliolefine Italia S.r.l.

Piazzale G. Donegani, 12

I-44122 Ferrara, Italy

Mobile: + 39 335 87 15 642

E-mail: gianluca.musacchi@lyondellbasell.com

www.lyb.com

Joris Briers

Technical Service Engineer

Consumer & Industrial, APS Europe

LyondellBasell

P. Colomalaan 25

2880 Bornem, Belgium

Mobile: +32 (0) 473 19 25 93

E-mail: joris.briers@lyondellbasell.com

www.lyb.com

Disclaimers

Before using a product sold by a company of the LyondellBasell family of companies ("LyondellBasell"), users should make their own independent determination that the product is suitable for the intended use and can be used safely and legally. LyondellBasell MAKES NO WARRANTY, EXPRESS OR IMPLIED (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) OTHER THAN AS AGREED TO BY LyondellBasell IN THE PRODUCT SALE CONTRACT.

LyondellBasell prohibits or restricts the use of its products in certain applications. For further information on restrictions or prohibitions of use, please contact a LyondellBasell representative.

Users should review the applicable Safety Data Sheet before handling the product.

Polybatch is a trademark owned and/or used by the LyondellBasell family of companies.

For general commercial presentations that make forward looking statements, including but not limited to projections, expectations, estimates and financial results:

The statements in this presentation relating to matters that are not historical facts are forward-looking statements. These forward-looking statements are based upon assumptions of management which are believed to be reasonable at the time made and are subject to significant risks and uncertainties. Actual results could differ materially based on factors including, but not limited to, the ability to comply with the terms of our credit facilities and other financing arrangements; the costs and availability of financing; the ability to maintain adequate liquidity; the ability to implement business strategies; availability, cost and price volatility of raw materials and utilities; supply/demand balances; industry production capacities and operating rates; uncertainties associated with the U.S. and worldwide economies; legal, tax and environmental proceedings; cyclical nature of the chemical and refining industries; operating interruptions; current and potential governmental regulatory actions; terrorist acts; international political unrest; competitive products and pricing; technological developments; risks of doing business outside of the U.S.; access to capital markets; and other risk factors. Additional factors that could cause results to differ materially from those described in the forward-looking statements can be found in our financial reports, which are available at www.lyondellbasell.com on the Investor Relations page.